

KeepRite Furnace 7-Flash Quick Guide

NorthWind HVAC - GTA Homeowner Guide 2026

What 7 Flashes Means

1 Flame or gas-valve fault

The furnace could not confirm a safe flame and locked out on purpose.

2 Common causes

Dirty flame sensor, weak igniter, gas-supply issue, or a grounding fault.

3 Confirm the count

Watch the LED and count twice, since four and six flashes mean different things.

Safe Checks You Can Do

1 Thermostat and power

Set to heat, check the breaker and the furnace switch.

2 Filter

Replace it if it is grey and clogged, then try one reset.

3 If it locks out again, stop

Gas and flame-sensor work must be done by a TSSA-licensed G1 or G2 technician.

Gas Safety

1 If you smell gas

Leave the home, then call Enbridge Gas at 1-866-763-5427 from outside, and 911 if anyone feels unwell.

2 Carbon monoxide

Keep a working CO alarm on every level of your home.

Questions? Visit northwindhvacpro.ca to book a licensed technician.